



# QUICK START GUIDE

FULL MANUAL ON [HDANYWHERE.COM/SUPPORT](http://HDANYWHERE.COM/SUPPORT)

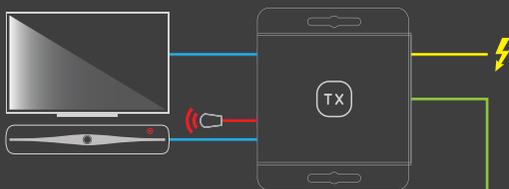

HDMI CABLE  
CAT6 CABLE  
INFRARED (IR) CABLE  
POWER

- 1** Connect a HDMI source (e.g Satellite/Cable TV, Apple TV, Xbox etc) to the "HDMI IN" of the XTND transmitter (labelled TX) using a HDMI cable. Connect another HDMI cable into the "HDMI Out" port to enable a local display.
- 2** Connect a Cat6 cable between the "CAT" port of the XTND transmitter (labelled TX) and the "CAT" port of the XTND receiver (labelled RX).
- 3** Connect a display to the "HDMI OUT" of the XTND receiver (RX) using a HDMI cable
- 4** Power on the XTND Extender by connecting the supplied 5V power supply to the XTND (TX) . XTND will immediately turn on. A picture will display after several seconds.
- 5** To control your HDMI source from your display location connect the IR TX to the "IR (OUT)" port on the XTND transmitter (TX). Ensure that the IR TX is positioned over the IR window on your source device.  
  
Connect the IR RX to the "IR (IN)" port on the XTND receiver (RX). Ensure that the IR RX is in-line-of-sight of your source device remote control.

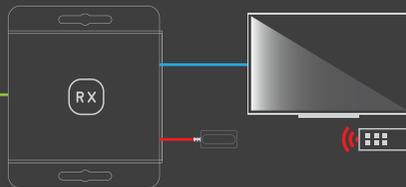

XTND  
HDMI EXTENDER

HDANYWHERE