



## **MPX 50 User Manual**

## Contents

Front and Rear panel .....	- 3 -
Remote Control.....	- 4 -

1

# MPX50 HD Media Player Instructions

**Safety guide:**

- . No user serviceable parts inside, do not open case.

## Front and Rear panel

The front panel provides the IR receiver and LED indicator. USB port and SD card slot are on the right. Five buttons from up to down are: on/off, next, down, return, and OK. When power on, LED light becomes red.

From left to right: 5.2V DC, AV output, VGA output, OPTICAL and HDMI output.

Please connect the TV with TV cable. For a better effect, please use HDMI cable to connect. Also the device supports VGA output.



IR Receiver  
LED Indicator

Power On/Off  
Menu Navigation

USB Slot  
SD Slot



Power Input  
Analog stereo audio, composite video output  
VGA output  
Optical audio output (future ready)  
HDMI output

## Remote Control



**POWER:** on/off key. Toggle between standby and on

**MUTE:** Toggle audio mute

**Info:** Provides detailed information about current playback file. Toggle to clear.

**PREV,NEXT:** Starts previous or next file.

**REV,FWD:** backward or forward at 1.5x, 2x, 4x, 8x, 16x, 32x

**Return:** Stops current file and displays OSD with current file folder.

**Setup:** Displays Settings OSD. Language, Screen Saver, Video output mode, Audio output mode, Auto Play, Auto Detect HDMI, Restore Auto Default Setting.

**OK:** Play or confirm key.

**Ratio:** Select screen ratios: Full Screen, Original File Size, 4:3, 16:9, Fit View

**OSD:** display control menu when playing movies, music, or picture.

**Audio:** Select Mono L, Mono R, or Stereo output

**VOL- and <VOL+:** Adjust the output volume.

**SUB-T:** Toggle subtitle On/Off

**Zoom:** Zoom in the picture or video.

**Rotate:** Rotate the pictures

**GO-TO:** Set up the start point time for playing video.

**Repeat:** Repeat settings: Repeat Once, Repeat One, Repeat All, Repeat Random

**Movie, Music, File, Photo:** Shortcut to relative folder.

**CVBS:** Select AV output. Note: This will disable the other video outputs.

 
**YUV:** Note: This device does not support YUV

**VGA:** Select VGA output. Note: This will disable the other video outputs.

**HDMI:** Selects HDMI output. Note: This will disable the other video outputs.

## Setup

Setup allows you to determine the default startup file type under Auto Play, e.g. videos, pictures, music.

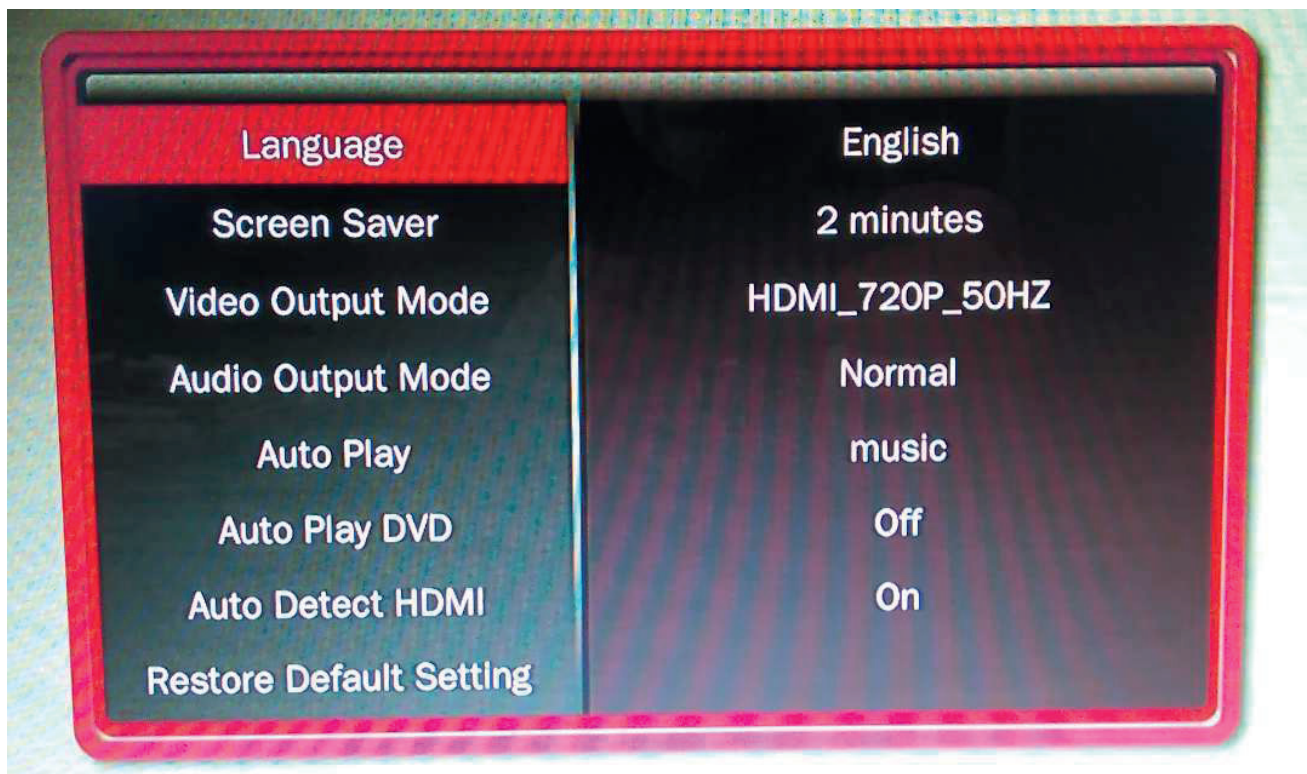

## Video

 
As described in the Setup section, it is possible to have the MPX50 automatically start playing videos at the point you insert an SD or USB drive containing videos.

## Photos / Pictures

As described in the Setup section, it is possible to have the MPX50 automatically start playing a picture slide show at the point you insert an SD or USB drive containing pictures.

## Music

Click Music icon and press <Ok> to enter or press Music button on remote. Music can be chosen from USB or SD card:

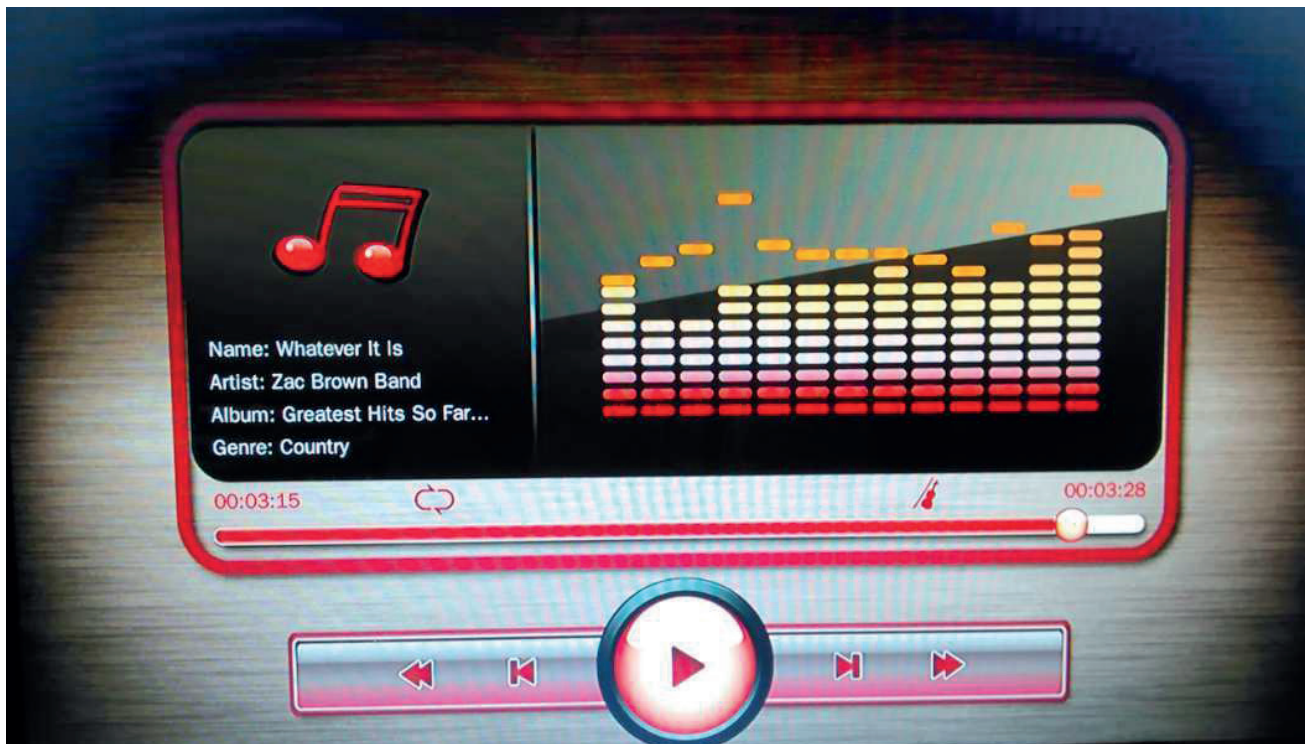


Enter into USB Device or smart card, all files and music can be seen. Choose one music and press <OK> to play.





 When playing, press <OSD> button on remote and a control bar will be shown as below:  
EQ mode, Lyric focus color, lyric unfocus color, and lyric play mode can be chosen.

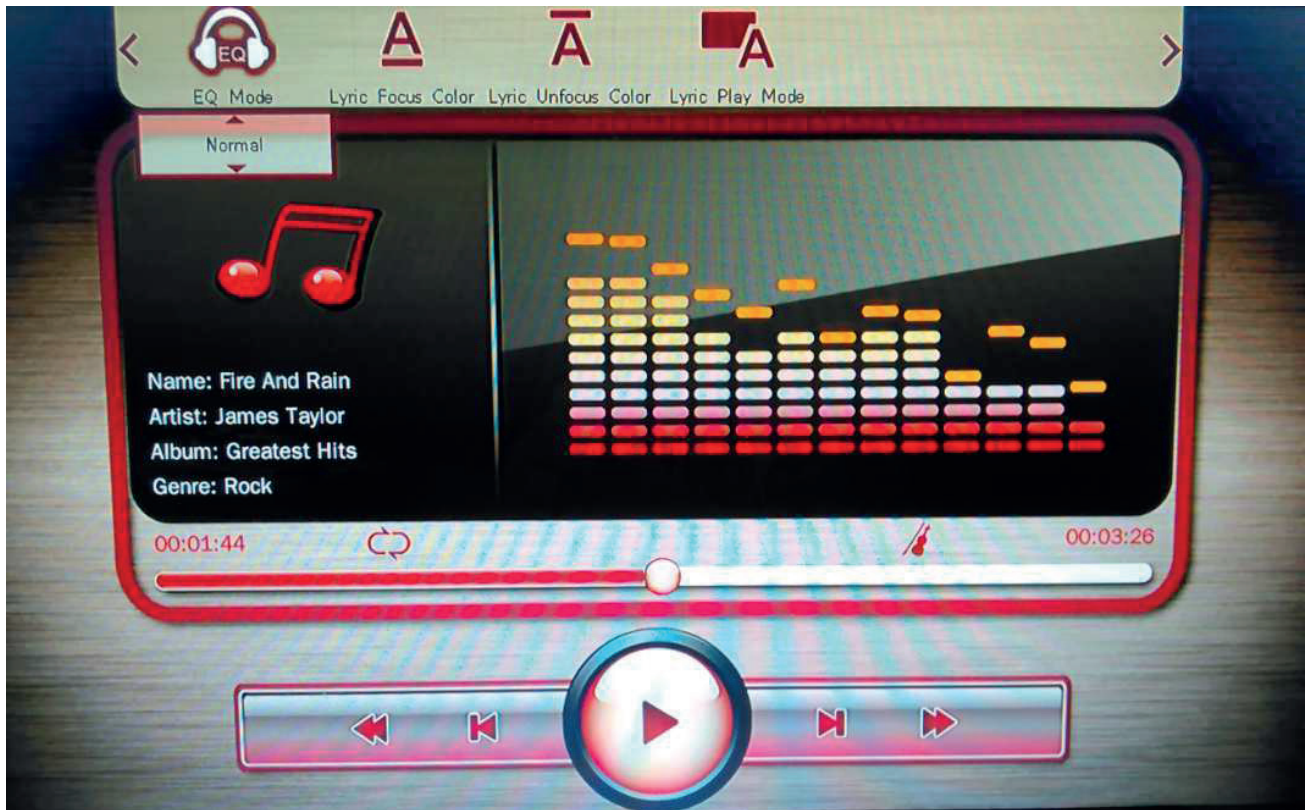

**NOTE:**

1. After press< OSD> button without any other operations, the control bar will disappear only <Return> button has pressed. It will not affect the continuous play. 9 of 14

2. The device supports lyric display if music file has accompanying lyric file..

For example:

Song name: Hero.mp3

Lyric name: Hero.lyc

Or no lyric will be shown only wave stripe

3. The device supports background music function. Press music icon and choose one song to play, then press< Photo>on remote to choose any photo to watch. At the moment playing music while watching photos. Press<Stop> button to stop background music.

Background music is loop playback. Music and photos can be stored in the same disc or not.

#### **4. FILE**

Click File icon and press<Ok>to enter or press File button on remote. Files can be chosen from USB or SD card:

Enter into USB Device or smart card, all files can be seen. Choose any file and press <OK> to play.

A file with “! ”in front means the player does not support this format.

#### **setting**

Click setting icon and press<Ok>to enter or press <Setup>button on remote.

**Language**

The player supports Simplified Chinese, traditional Chinese, English, Russian, Portuguese, Spanish, Korean, Japanese etc

**Screen saver**

Set time for when screen saver appears. The screen saver is for when player is not playing video or pictures, audio, or during audio playback. You can turn off the screen saver as well.

**Video Output Mode**

Set video output format

PAL

NTSC

HDMI

VGA

**Audio output mode**

Set Audio Output to SPDIF LPCM, or RAWDATA

**Autoplay**

Off

Movies

Music

Photos

**Auto play DVD**

NA

**Restore default setting**

Restore all parameters to the factory state.

**RTCTIMER Setup**

The device can set the system time in order to auto play/off.

**AUTO POWER SETUP PAGE**

Set the time to auto on/off and 4 groups of time can be set. Workday can be chosen from every day, except weekend, and except Sunday. The time format is 24 hours. 13 of 14

## Specifications

1. Supports plug-in large capacity SATA or IDE hard disk or USB disk, plug and play.
2. Supports SD card.

### Video Output

- NTSC
- PAL
- VGA 720P
- HDMI720P
- 1080P high definition video output.

### Video File Formats

- RMVB/RM (RV8/9)
- h.263
- h.264 (MOV/MP4/M4V)
- MPEG-1/2(VOB)
- MPEG-4(XVID/DIVX)
- WMV7/VC-1
- MKV
- AVI
- TS/TP
- VOB
- PMP
- FLV 1920\*1080P

### Audio Formats

- MP3
- WMA
- AFE
- FLAC
- OGG
- APE
- AAC
- AC3 and DTS

### Photo/Pictures

- JPEG
- GIF
- BMP
- PNG

### Language Support

- Simplified/ Traditional Chinese
- Japanese

- Korean
- Russian
- Spanish
- English

#### Subtitle

- multi-track and multi-subtitle video file.
- Switching soundtrack and subtitle at will.

External 5.2V/1.5A DC powers supply.