 


# QUICK START GUIDE

FULL MANUAL ON [HDANYWHERE.COM/SUPPORT](http://HDANYWHERE.COM/SUPPORT)

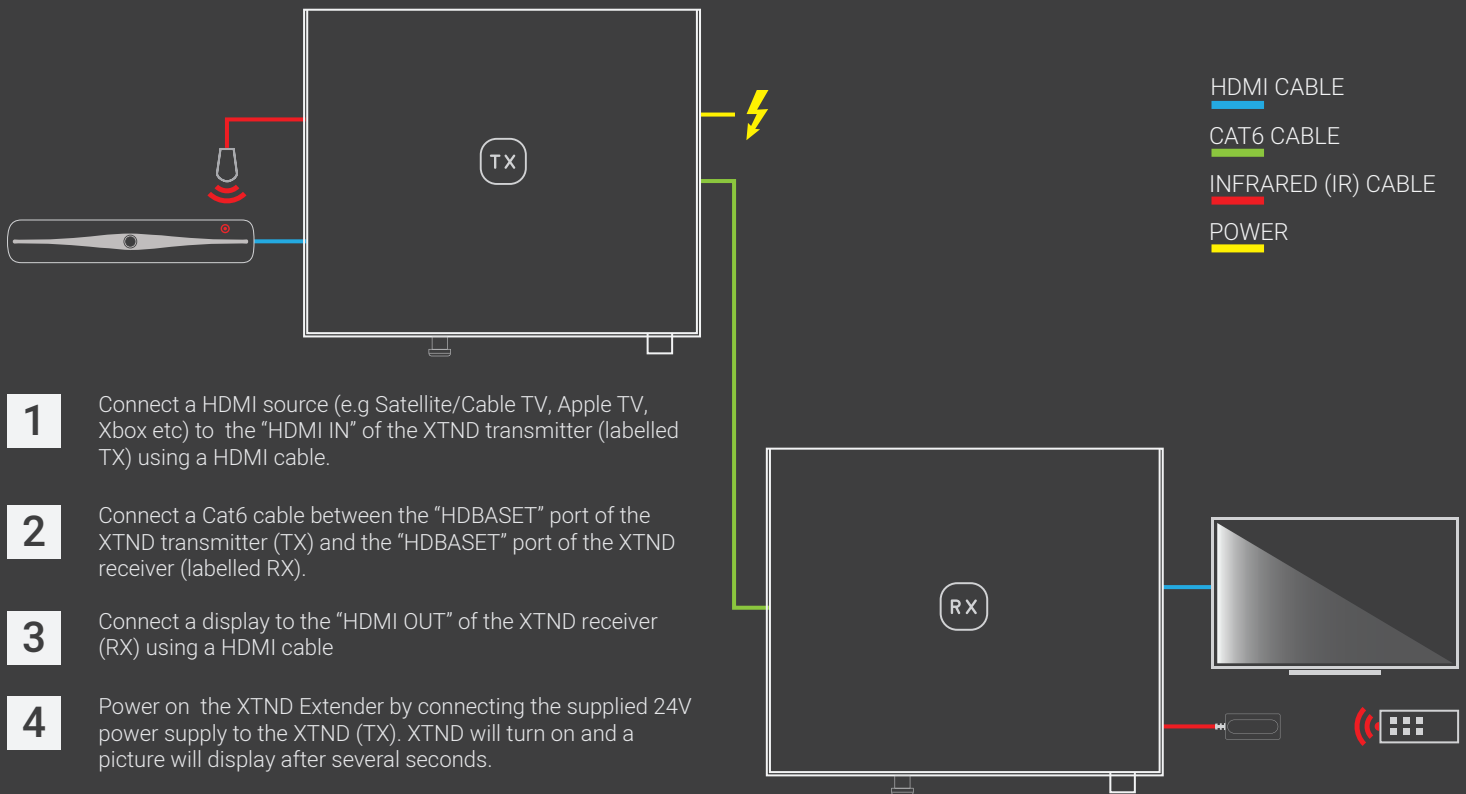

- 1** Connect a HDMI source (e.g Satellite/Cable TV, Apple TV, Xbox etc) to the "HDMI IN" of the XTND transmitter (labelled TX) using a HDMI cable.
  - 2** Connect a Cat6 cable between the "HDBASET" port of the XTND transmitter (TX) and the "HDBASET" port of the XTND receiver (labelled RX).
  - 3** Connect a display to the "HDMI OUT" of the XTND receiver (RX) using a HDMI cable
  - 4** Power on the XTND Extender by connecting the supplied 24V power supply to the XTND (TX). XTND will turn on and a picture will display after several seconds.
  - 5** To control your HDMI source from your display location connect the IR TX to the "IR (OUT)" port on the XTND transmitter (TX). Ensure that the IR TX is positioned over the IR window on your source device.
- Connect the IR RX to the "IR (IN)" port on the XTND receiver (RX). Ensure that the IR RX is in-line-of-sight of your source device remote control.

 
XTND  
HDMI EXTENDER

HDANYWHERE

# IN THE BOX

FULL MANUAL ON [HDANYWHERE.COM/SUPPORT](http://HDANYWHERE.COM/SUPPORT)

1x XTND TRANSMITTER (TX)

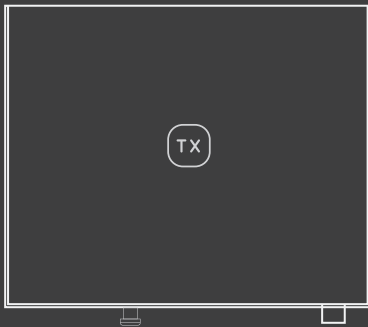

4x MOUNTING WINGS



INSTALL AT SOURCE LOCATION

 
1x XTND RECEIVER (RX)



INSTALL AT DISPLAY LOCATION


2x IR RX

2x IR TX

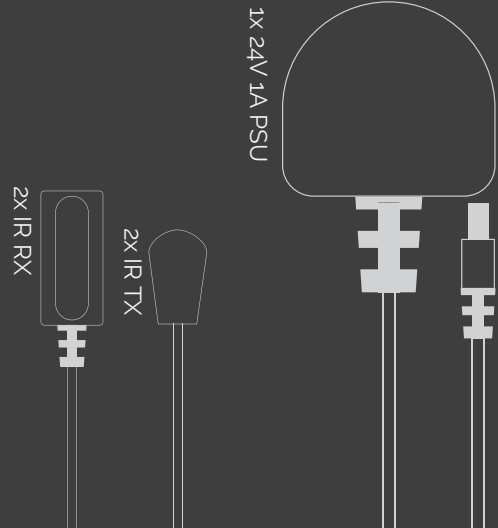

INFRARED (IR) CABLE

 1x 24V 1A PSU

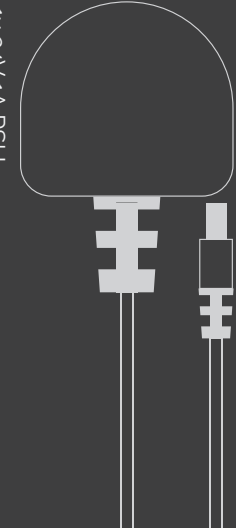

POWER

## CAT6 RESOLUTION/DISTANCE GUIDE

HD UHD

0m	10m	20m	30m	40m	50m	60m	70m	80m	90m	100m	110m	120m	130m	140m	150m
0ft	32ft	65ft	98ft	131ft	164ft	197ft	230ft	262ft	295ft	328ft	360ft	393ft	426ft	459ft	492ft

HDANYWHERE