


Setup and configuration

1

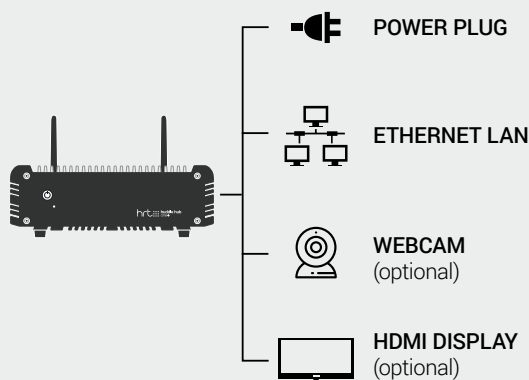

ACCESS HUDDLE HUB WiFi NETWORK

SSID: **HuddleHubOne**
Password: **HuddleHubOne**

CONNECT TO ADMIN PAGES

Admin page Url: **http://10.3.2.1**
Admin page password: **password**

Please note:
At the first start, Huddle Hub One+ takes a few minutes to update firmware and configure itself. During this time the system is not available.

Download the apps

2

www.hrt.website



www.hrt.website



App Store



Google Play



Connect devices

3



ACCESS VIA COMPANY LAN

1. Connect your device to the same company LAN you connected the hub to

2. Launch the Huddle Hub App

DIRECT ACCESS

1. Connect to the Huddle Hub wifi network:

SSID: **HuddleHubOne**

Password: **HuddleHubOne**

2. Once connected launch the Huddle Hub App

Run a session

4

Start Session



Start Presentation



Start Multicam feed



Launch the app, click the 9 dots icon (Status Bar on MacOS or Tray Bar on MS Windows), and click on **"HuddleHubOne"**.

Please note: a Passcode may be required.

Click on **"Present"** to start presenting your screen.

Please note: only Desktop Apps (MacOS and Windows) can be presenter.

Click on **"Start multicam feed"** and select the **Huddle Hub** video driver in your video conference app.

camera: **Huddle Hub**